



KTG200-2L-500-UV-PS-L4 GERMICIDAL LAMP BALLAST

DESCRIPTION

Ballast for UV-C Lamps | 120-277V input | Design to run 1 or 2 lamps not to exceed 200W Max Load | ~500mA Output | Large Linear Case Style

APPLICATION

For use in fixtures specifically designed for disinfection purposes using UV-C 254nm light sources. (Water purification, HVAC air handling, Food processing, clean room, and other general sterilization and disinfection needs)



PRODUCT FEATURES

- Ballast designed for Germicical/UV-C low-pressure mercury arc lamps
- Program Start Design ensures starting conditions that are optimal for lamp life, particuarilly when used in conjunction with occupany sensors
- Transient Protection Meets ANSI/IEEE C62.41-2002 Cat A.
- Meets FCC Part 18 (Class A) Non-consumer Limits
- Sound Rated A.

- UL Listed (Class P, Type 1 Outdoor, Type HL)
- Lamp End of Life Protection
- No PCB's
- 120-277V Input 50/60Hz
- Maximum Case Temperature: 167°F, 75°C
- Minimum Start Temp: 0°F/-18°C

Lamp Type	# of Lamps	Input Voltage (V)	Input Power (W)	Input Current (A)	Power Factor	Crest Factor	Lamp Current (mA)	Lamp Power (W) per lamp	Max. THD
KTL-G95T8-254-HO-DE	1	120	71	0.59	0.995	<1.7	510	64	<10
		277	74	0.30	0.918	<1.7	510	65	<10
	2	120	136	1.14	0.998	<1.7	490	62	<10
		277	134	0.50	0.970	<1.7	490	61	<10
KTL-G55PLL-254-2G11	1	120	53	0.45	0.991	<1.7	520	48	<10
		277	54	0.23	0.850	<1.7	520	48	<10
	2	120	104	0.87	0.997	<1.7	500	49	<10
		277	99	0.38	0.950	<1.7	500	47	<10

PERFORMANCE SPECIFICATIONS









KTG200-2L-500-UV-PS-L4 GERMICIDAL LAMP BALLAST

PHYSICAL DIMENSIONS

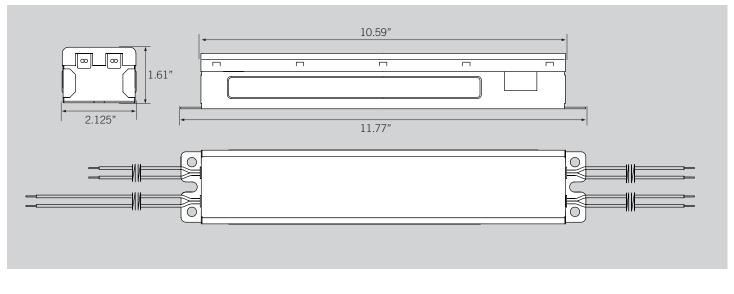

WIRING

Wiring Diagram

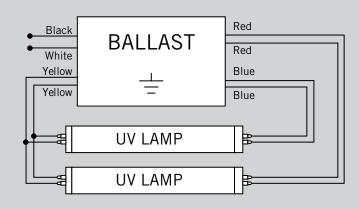

OMIT YELLOW CONNECTION FOR SINGLE LAMP APPLICATION

Wire Details	
WIRE COLOR	WIRE LENGTH
Black	22"

Black	22"
White	22"
Red	40"
Blue	40"
Yellow	54"





KTG200-2L-500-UV-PS-L4 GERMICIDAL LAMP BALLAST

ORDERING INFORMATION

ORDER CODE	PACK QTY.	UPC	EASY CODE
KTG200-2L-500-UV-PS-L4	TBD	843654136035	PXA-13

CATALOG NUMBER BREAKDOWN

KTG200-2L-500-UV-PS-L4

- **1** Keystone Technologies Germicidal Ballast
- 2 Max. Reccomended Lamp Power
- 3 2 Lamps
- 4 Nominal Output Current
- 5 120-277V
- 6 Program Start
- 7 Linear Style

DISCLAIMERS

- UV-C RISK GROUP 3 (per ANSI/IESNA RP-27.3-96)
- **WARNING:** These lamps emit high power UV radiation. Avoid eye and skin exposure to unshielded product. Follow all installation instructions and user manuals.
- THIS PRODUCT CAN CAUSE INJURY IF IMPROPERLY USED. Do not attempt to look at the lamp during operation.
- UV-C radiation is harmful to the skin and eyes. Ensure people and animals avoid direct exposure to UV-C. When installing the lamps, make sure the devices installation manual is followed and lamps are not switched on during the installation process. Follow all warning statements on the lamp and device packaging.
- Materials that are exposed to UV-C for a long time may become damaged and/or discolored. Take care to prevent paintings, artwork, plants, and other objects from exposure to avoid damage.
- Use only in products specially designed to accept UV-C lamps. Lamps should be used in an enclosed environment and/or within specially designed devices to ensure users and/or occupants are always shielded from the radiation.
- Do not install these lamps in standard fluorescent fixtures or use for general lighting applications.

With regards to the effectiveness in the inactivation of certain viruses, bacteria, fungi, or other harmful pathogens or micro-organisms: Keystone Technologies, LLC does not promise or warrant that the use of the UV-C lamps described here will protect any user (either direct or indirect) from or prevent infection and/or contamination with any viruses, bacteria, fungi, or other harmful pathogens or micro-organisms. The UV-C lamps are NOT approved or certified as a medical device by the FDA or any other regulatory body. As such, they are not intended for use to disinfect medical devices or equipment without further fixture level certifications. In addition to and without limitation of any exclusions or limitations of liability of Keystone Technologies, LLC as set forth in any agreement for the sale, distribution or otherwise making available of the UV-C lamps outside of their intended use or contrary to their installation and operation instructions, each as described in this document, the user manuals and/or the mounting instructions.